



Please note the following about the Crazyflie expansion connectors:

- \* VCOM is always on power directly from the battery/USB and is not regulated
- \* VCC is only on when the system is on and is regulated to 2.8V
- \* VUSB is connected directly to the USB which means this will supply at 4.5–5.5V when the USB is connected and can be used for charging the battery when the USB is not connected



Licensed under CC-BY-NC-SA 4.0

**Bitcraze AB**

Sheet: /  
File: vl53l0x.sch

**Title: Crazyflie 2.0 Z-ranger deck**

Size: A4 Date: 2016-12-08  
KiCad E.D.A. kicad 4.0.6-e0-634953ubuntu16.04.1

Rev: B  
Id: 1/1